Always there to help you

Register your product and get support at
www.philips.com/welcome

Question? Contact Philips

HTD3200

User manual

PHILIPS

Contents

1 Important 2
Safety 2
Care for your product 3
Care of the environment 3

2 Your home theater 4
Main unit 4
Remote control 4

3 Connect and setup 7
Speakers 7
Connectors 8
Connect to TV 8
Connect audio from TV and other devices 10

4 Use your home theater 11
Choose sound 11
Discs 11
USB storage devices 12
DivX 13
Audio, video, and picture options 14
Radio 15
MP3 player 15
Create MP3 files 15
EasyLink 16

5 Change settings 18
Picture 18
Sound 18
Language 18
Parental control 19
Energy saving 20
Apply factory settings 20

6 Update software 22
Check software version 22
Update software through USB or CD-R 22

7 Product specifications 23

8 Troubleshooting 25

9 Notice 27
Copyright 27
Compliance 27
Mains fuse (UK only) 27
Trademarks 27

1 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Risk of swallowing batteries!

- The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach

of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

This is CLASS II apparatus with double insulation, and no protective earth provided.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

Care of the environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.
Please act according to your local rules and do not dispose of your old products with your normal household waste.
Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

2 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

Main unit

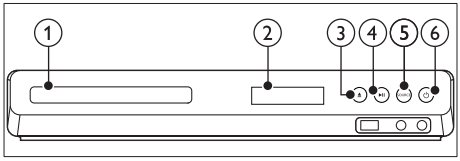

1. Disc compartment
2. Display panel
3. ▲ (Open/Close)
   Open or close the disc compartment, or eject the disc.
4. ▶II (Play/Pause)
   Start, pause or resume play.
5. SOURCE
   Select an audio or video source for the home theater.
6. ⏻ (Standby-On)
   Switch the home theater on or to standby.

Remote control

This section includes an overview of the remote control.

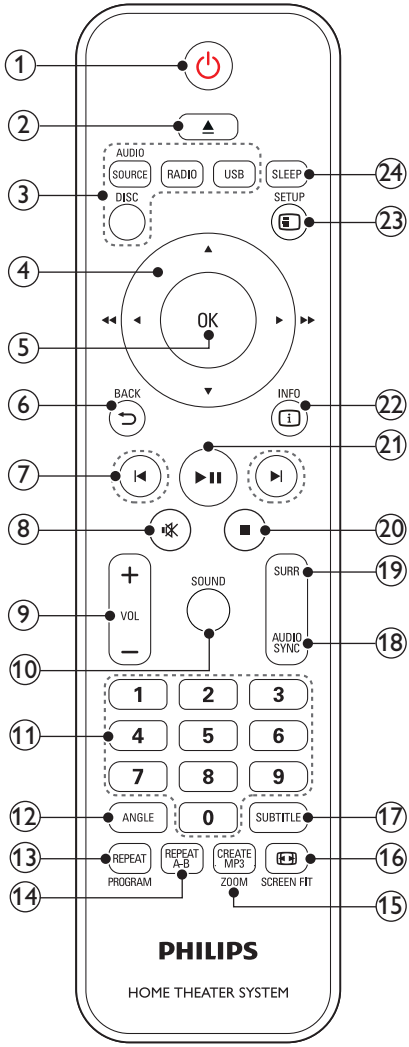

1. ⏻ (Standby-On)
   - Switch the home theater on or to standby.
   - When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.
2. ▲ (Open/Close)

Open or close the disc compartment, or eject the disc.

③ Source buttons
- **DISC**: Switch to disc source.Access or exit the disc menu when you play a disc.
- **AUDIO SOURCE**: Select an audio input source.
- **RADIO**: Switch to FM radio.
- **USB**: Switch to USB storage device.

④ Navigation buttons
- Navigate menus.
- In video mode, press left or right to fast backward or fast forward; press up or down to slow forward or slow backward.
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.

⑤ OK
Confirm an entry or selection.

⑥ ⮌ BACK
Return to a previous menu screen.

⑦ ⏮ / ⏭ (Previous/Next)
- Skip to the previous or next track, chapter or file.
- In radio mode, select a preset radio station.

⑧ 🔇 (Mute)
Mute or restore volume.

⑨ VOL +/-
Increase or decrease volume.

⑩ SOUND
Select a sound mode.

⑪ Numeric buttons
Select an item to play.

⑫ ANGLE
Select video scenes recorded in different camera angels.

⑬ REPEAT / PROGRAM
- Select or turn off repeat mode.
- In radio mode, set a radio station.

⑭ REPEAT A-B
Mark two points within a chapter or track to repeat play, or turn off the repeat mode.

⑮ CREATE MP3/ZOOM
- Access the create MP3 menu.
- Zoom into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.

⑯ SCREEN FIT
Fit the picture format to the TV screen.

⑰ SUBTITLE
Select subtitle language for video.

⑱ AUDIO SYNC
- Select an audio language or channel.
- Press and hold to access audio delay setting, then press **+/-** to delay the audio to match the video.

⑲ SURR
Select surround sound or stereo sound.

⑳ ■ (Stop)
Stop play.

㉑ ▶❚❚ (Play/Pause)
Start, pause or resume play.

㉒ INFO
Access more play options while playing a disc or a USB storage device.

㉓ SETUP
Access or exit the setup menu.

㉔ SLEEP
Switch the home theater to standby mode after the elapsed time.

EasyLink controls

With Easylink, you can control your home theater and the TV with the following buttons on your home theater remote control (see 'EasyLink' on page 18).

- ⏻ (**Standby-On**): Press and hold to switch your home theater, TV and the connected devices to standby.
- ▶❚❚ (**Play/Pause**): When a video disc is in the disc compartment, wake up the TV from standby, and then play a disc.

3 Connect and setup

This section helps you connect your home theater to a TV and other devices, and then set it up.
For information about the basic connections of your home theater and accessories, see the quick start guide.

Note

- For identification and supply ratings, refer to the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

Speakers

Position, connect, and set up your speakers for best surround sound.

Position

Speaker position plays a critical role in setting up a surround sound effect.
For best results, place your speakers and the subwoofer as shown below.

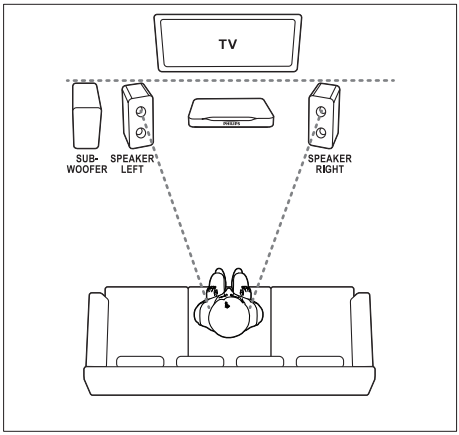

Note

- Surround sound depends on various factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics.

Follow these general guidelines, and then set up your subwoofer.

1 Seating position:
This is the center of your listening area.

2 **SPEAKER LEFT** (speaker left) and **SPEAKER RIGHT** (speaker right) speakers:
Place the left and right speakers in the front, and equidistant from the main unit in an arc, so that the two speakers are at same distance from your seating position.
For best effect, point the speakers towards the seating position and place the speakers close to the ear level (when seated).

3 **SUBWOOFER** (subwoofer):
Place the subwoofer at least one meter to the left or right of the TV. Leave about ten centimeter clearance from the wall.

Connect

Connect your speakers and the subwoofer to your home theater as described in the quick start guide.

Connectors

Connect other devices to your home theater.

Front

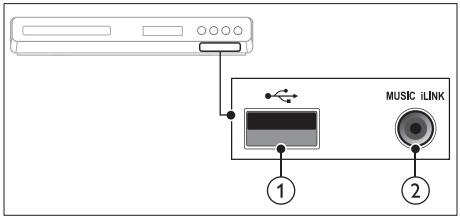

① (USB)
Audio, video or picture input from a USB storage device.

② MUSIC iLINK
Audio input from an MP3 player.

Back connectors

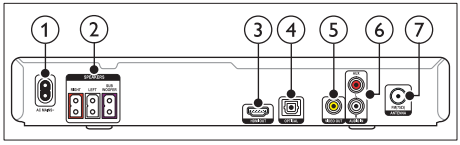

① AC MAINS
Connect to the power supply.

② SPEAKERS
Connect to the supplied speakers and subwoofer.

③ HDMI OUT
Connect to the HDMI input on the TV.

④ OPTICAL
Connect to an optical audio output on the TV or a digital device.

⑤ VIDEO OUT
Connect to the composite video input on the TV.

⑥ AUDIO IN-AUX
Connect to an analog audio output on the TV or an analog device.

⑦ ANTENNA FM 75 Ω
Signal input from an antenna, cable or satellite.

Connect to TV

Connect your home theater to a TV to watch videos. You can listen to audio from TV programs through your home theater speakers. Use the best quality connection available on your home theater and TV.

Option 1: Connect to TV through HDMI (ARC)

Best quality video

Your home theater supports HDMI version with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, connect your home theater to the TV through the HDMI ARC connection for easy and quick setup.
With HDMI ARC, you do not need an additional audio cable to play audio from TV through your home theater.

1 Using a High Speed HDMI cable, connect the **HDMI OUT (ARC)** connector on your home theater to the **HDMI ARC** connector on the TV.
The **HDMI ARC** connector on the TV might be labeled **HDMI IN** or **HDMI**. For details on TV connectors, see the TV user manual.

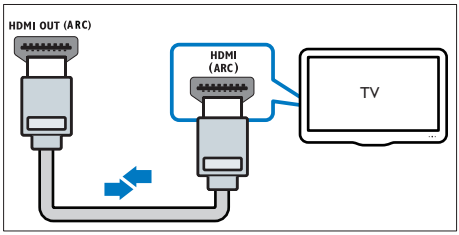

2 On your TV, turn on HDMI-CEC. For details, see the TV user manual.
   ↪ When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater.

3 If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up audio for connected devices' on page 12).

Option 2: Connect to TV through HDMI

Best quality video

If your TV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.
With a standard HDMI connection, you need an additional audio cable to play the audio from the TV through your home theater (see 'Connect audio from TV and other devices' on page 12).

1 Using a High Speed HDMI cable, connect the **HDMI OUT (ARC)** connector on your home theater to the **HDMI** connector on the TV.
   The HDMI connector on the TV might be labeled **HDMI IN**.

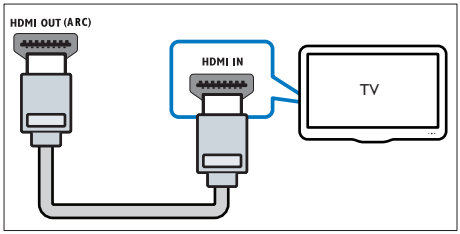

2 On your TV, turn on HDMI-CEC. For details, see the TV user manual.
   ↪ When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater.

3 To play audio from TV programs through your home theater, connect an additional audio cable (see 'Connect audio from TV and other devices' on page 12).

4 If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up audio for connected devices' on page 12).

Note

- If your TV has a DVI connector, you can use an HDMI/DVI adapter to connect to TV.

Option 3: Connect to the TV through composite video

Basic quality video

If your TV does not have HDMI connectors, connect your home theater to the TV through a composite connection. A composite connection does not support high-definition video.
With a composite connection, you need an additional audio cable to play the audio from the TV through your home theater (see 'Connect audio from TV and other devices' on page 12).

1 Using a composite video cable, connect the **VIDEO** connector on your home theater to the composite video connector on the TV.
   The composite video connector might be labeled **AV IN**, **VIDEO IN**, **COMPOSITE**, or **BASEBAND**.

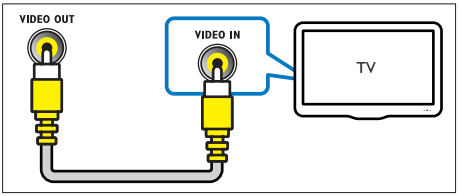

2 On your TV, switch to the correct video input.

3 To play audio from TV programs through your home theater, connect an additional audio cable (see 'Connect audio from TV and other devices' on page 12).
On your home theater, press **SOURCE** repeatedly to select the correct audio input.

Connect audio from TV and other devices

Play audio from TV or other devices through your home theater.
Use the best quality connection available on your TV, home theater, and other devices.

Note

- The audio connections in this user manual are only recommendations. You can use other connections too.

Option 1: Connect audio through a digital optical cable

Best quality audio

Using an optical cable, connect the **OPTICAL** connector on your home theater to the **OPTICAL OUT** connector on the TV or other device.
The digital optical connector might be labeled **SPDIF**, **SPDIF OUT**, or **OPTICAL**.

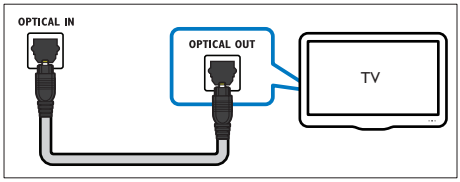

Option 2: Connect audio through analog audio cables

Basic quality audio

Using an analog cable, connect the **AUX** connectors on your home theater to the **AUDIO OUT** connectors on the TV or other device.

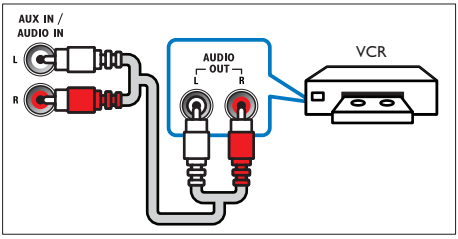

Set up audio for connected devices

When you connect a device to your home theater, check the audio settings.

1 On your TV and other devices, turn on HDMI-CEC. For details, see the user manual of the TV and the other device.

2 Select 'Amplifier' from the TV speakers menu. For details, see the TV user manual.

3 On your home theater, turn on System Audio Control, and then map the audio of the connected device to the correct connectors on your home theater (see 'Play audio from home theater' on page 19).
If the connected device is not HDMI-CEC compliant, press **SOURCE** repeatedly on your home theater to select the correct audio input.

4 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

- Make the necessary connections described in the Quick start guide and the user manual.
- Switch the TV to the correct source for the home theater.

Choose sound

This section helps you choose the ideal sound for your video or music.

Sound mode

Select predefined sound modes to suit your video or music.

1 Press **SOUND** repeatedly to select a sound mode.
   - **MOVIE**: Enjoy a cinematic audio experience, specially enhanced for movies.
   - **MUSIC**: Recreate the original recording environment of your music, in the studio or at a concert.
   - **ORIGINAL**: Experience the original sound of your movies and music, without added sound effects.
   - **NEWS**: Hear every word with optimized speech and clear vocals.
   - **GAMING**: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.

Surround sound mode

Experience an immersive audio experience with surround sound modes.

1 Select **SURR** repeatedly to select a surround mode.
   - **DOLBY VS**: Creates a highly compelling 5.1 channel listening experience.
   - **STEREO**: Two-channel stereo sound. Ideal for listening to music.

Discs

Your home theater can play DVDs, VCDs, and CDs. It can also play discs that you've made at home, such as CD-R discs of photos and music.

What you need

- Audio and video connection between your home theater and the TV.
- An audio or a video disc.

Play discs

1 Insert a disc into the home theater.
   ↳ Your TV switches to the correct source and the disc plays automatically. If it does not, press **DISC**.

2 Press the play buttons to control play (see 'Play buttons' on page 13).

Play buttons

Button	Action
Navigation buttons	Navigate menus.
OK	Confirm an entry or selection.
▶❚❚ (Play/Pause)	Start, pause or resume play.
■	Stop play.
⏮ / ⏭	Skip to the previous or next track, chapter or file.
◀◀ / ▶▶	Fast backwards or fast forwards. Press repeatedly to change the search speed.
Navigation buttons (left/right)	Rotate the picture clockwise or counter-clockwise.

Button	Action
Navigation buttons (up/down)	Flip the picture vertically or horizontally.
SUBTITLE	Select subtitle language for video.
DISC	Access or exit the disc menu.
AUDIO SYNC	Select an audio language or channel.
SCREEN FIT	Fit the picture format to the TV screen.
ZOOM	Zoom into a video scene or picture.
REPEAT	Select or turn off repeat mode.
REPEAT A-B	Mark two points within a chapter or track to repeat play, or turn off the repeat mode.
ANGLE	Select video scenes recorded in different camera angels.
INFO	Access the advanced options when you play your audio, video, or media files.

Display menu for VCD and SVCD

Display the content menu on VCD and SVCD discs.

1. Press SETUP.
2. Select **[Preference Setup]**, and then press **OK**.
3. Select **[PBC]** > **[On]**, and then press **OK**.

Note

- To skip the content menu, select **[Off]**.
- While playing a VCD/SVCD, you can press **DISC** to turn off or on the PBC (playback control).

Display menu for MP3/JPEG

You can choose how you want the MP3 contents to display.

1. Press SETUP.
2. Select **[Preference Setup]**, and then press **OK**.
3. Select **[MP3/JPEG Display]**, and then press **OK**.
4. Select the following options, then press **OK**.
   - **[View Folders]**: Display the MP3 folders.
   - **[View Files]**: Display the MP3 files.

Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

1. Press SETUP.
2. Select **[Audio Setup]**, and then press **OK**.
3. Select **[Audio Sync]**, and then press **OK**.
4. Press the **Navigation buttons** (left/right) to synchronize the audio with the video.
5. Press **OK** to confirm.

Note

- Press and hold **AUDIO SYNC** on the remote control for quick access to the audio sync setup menu.

USB storage devices

Enjoy pictures, audio and video on a USB storage device.

What you need

- A USB storage device that is formatted for FAT, and complies with the Mass Storage Class.
- A USB extension cable, if the USB storage device does not fit into the connector.

Note

- You can use digital cameras connected by USB if they can play the files without using a special computer program.

Play files

1 Connect the USB storage device to the home theater.
2 Press **USB**.
↳ A content browser is displayed.
3 Select a file, and then press **OK**.
4 Press the playback buttons to control play (see 'Play buttons' on page 13).

DivX

Play DivX videos from :
- a disc (see 'Discs' on page 13),
- a USB storage device (see 'USB storage devices' on page 14).

VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

1 Press **SETUP**.
2 Select **[General Setup]**, and then press **OK**.
3 Select **[DivX(R) VOD Code]**, and then press **OK**.
↳ The DivX VOD registration code for your home theater is displayed.

Subtitles

If your video has subtitles in multiple languages, select a subtitle language.

1 While playing video, press **SUBTITLE** to select a language.

Note

- Make sure that the subtitle file has the same name as the video file. For example, if the video file is named 'movie.avi', save the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater can play subtitle files in the following formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. These files do not appear in the file navigation menu.
- If the subtitles do not appear correctly, change the character set.

Subtitle character set

If the subtitles do not appear correctly, change the character set that supports the DivX subtitle.

1 Press **SETUP**.
2 Select **[Preference Setup]**, and then press **OK**.
3 Select **[DivX Subtitle]**, and then press **OK**.
4 Select a character set, and the press **OK**.

Character Set	Language
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish
[Central Europe]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian
[Greek]	Greek
[Hebrew]	Hebrew
[Chinese(Simp)]	Simplified Chinese

Audio, video, and picture options

Use advanced features when you play audio, video, or media files from a disc or a USB storage device.

Audio options

1 Press ⓘ **INFO** repeatedly to cycle through the following options:
- Show the current track information and time.
- **[Off]**: Press **Navigation buttons** (left/right) to select a repeat mode.
- **[Disc Go To:%c%2d:%2d%C]**: Skip to a specific part of the disc by entering the disc time.
- **[Track Go To:%c%2d:%2d%C]**: Skip to a specific part of the track by entering the track time.
- **[Select Track:%c%2d%C/%2d]**: Select a specific track.

Video options

1 Press ⓘ **INFO**.
↳ The video options menu is displayed.

2 Press the **Navigation buttons** and **OK** to select and change:
- **[Title]**: Select a specific title.
- **[Chapter]**: Select a specific chapter.
- **[Track]**: Select a specific track (for VCD/SVCD only).
- **[Audio]**: Select audio language for video.
- **[Subtitle]**: Select subtitle language for video.
- **[Angle]**: Select video scenes recorded in different camera angels.
- **[TT Time]**: Skip to a specific part of the video by entering the title time.
- **[Ch Time]**: Skip to a specific part of the video by entering the chapter time.
- **[Disc Time]**: Skip to a specific part of the video by entering the disc time (for VCD/SVCD only).
- **[Track Time]**: Skip to a specific part of the video by entering the track time (for VCD/SVCD only).
- **[Preview]**: Select a content preview for disc.
- **[Repeat]**: Select a repeat mode.
- **[Time Disp.]**: Select the information of time display.

Picture options

1 Press ⓘ **INFO** to access picture preview mode.
↳ 12 thumbnail pictures are displayed.

2 Press ⏮ / ⏭ to go to previous or next preview page.

3 Press the **Navigation buttons** and **OK** to select a picture.

Slideshows

While playing audio, access fun features such as picture and musical slideshows.

Picture slideshows

View a slideshow of your pictures stored in your disc or a USB storage device.

1 Select a picture from a disc or USB storage device, and then press ▶❚❚.

2 Press ■ to stop the slideshow.

Musical slideshows

Create a musical slideshow to play music and pictures at the same time.

1 Select a music track, and then press **OK**.

2 Press ⮌ **BACK**, and go to the picture folder.

3 Select a picture, and then press ▶ (**Play**) to start the slideshow.

4 Press ■ to stop slideshow.

5 Press ■ again to stop music.

Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.

What you need

- FM antenna.

Note

- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

Tune stations

1. Connect the FM antenna as described in the Quick start guide.
2. Press **RADIO**.
   - ↳ If you have already installed the radio stations, the last channel that you listened to is played.
   - ↳ If you have not installed any radio stations, the message **AUTO INSTALL...PRESS PLAY** appears on the display panel. Press ▶ (**Play**).
3. Press the following buttons to listen or to change radio stations:

Button	Action
⏮ / ⏭	Select a preset radio station.
Navigation buttons (left/right)	Search for a radio station.
Navigation buttons (up/down)	Fine tune a radio frequency.
■	Press to stop the installation of radio stations. Press and hold to erase the preset radio station.
PROGRAM	Manual: 1) Press ☰ **OPTIONS**. 2) Press ⏮ / ⏭ to select your preset. 3) Press ☰ **OPTIONS** again to store the radio station. Automatic: Press and hold for three seconds to reinstall the radio stations.

Listen to radio

1. Press **RADIO**.
   - To listen to a preset station, press ⏮ or ⏭.
   - To search for a radio station, and then listen, press **Navigation buttons** (left/right).
2. Press **+/-** (**Volume**) to change the volume.

MP3 player

Connect your MP3 player to play your audio files or music.

What you need

- An MP3 player.
- A 3.5mm stereo audio cable.

Play music

1. Connect the MP3 player to the home theater as described in the Quick start guide.
2. Press **AUDIO SOURCE** repeatedly until '**MUSIC I-LINK**' appears on the display panel.
3. Press the buttons on the MP3 player to select and play audio files or music.

Create MP3 files

Use your home theater to convert audio CDs into MP3 files.

What you need

- An audio disc.
- A USB storage device

1 Connect a USB storage device to the home theater.

2 Play your audio CD (CDDA/HDCD).

3 Press **CREATE MP3**.
   ↳ A confirmation message is displayed.

4 Select **[Yes]**, and then press **OK**.
   ↳ The create MP3 screen is displayed. The right panel contains MP3 settings and the left panel shows the audio tracks.

5 Press the **Navigation buttons** and **OK** to select and change:
   - **[Speed]**: Select the write-to-file speed.
   - **[Bitrate]**: Select the conversion quality.
   - **[Device]**: Select the USB storage device which you use to store the MP3 files.

6 Navigate to the right panel, and then select the audio tracks and press **OK**.
   - To select all tracks, navigate to **[Select All]**, and then press **OK**.

7 Select **[Start]**, and then press **OK** to start the MP3 conversion.
   ↳ A new folder which contains the MP3 files is created in the USB storage device.
   - To exit the menu, select **[Exit]**, and then press **OK**.

Note

- When the conversion is in process, do not press any buttons.
- DTS CDs and copy-protected CDs cannot be converted.
- Write-protected or password-protected USB storage device cannot be used to store MP3 files.

EasyLink

The home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI can be controlled by a single remote control.

Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

What you need

- HDMI-CEC compliant devices.
- An HDMI connection between the connected devices.

Switch on

1 On the TV and other connected devices, turn on the HDMI-CEC operations. For details, see the manual of the TV or other devices.

2 Press **SETUP**.

3 Select **[General Setup]**, and then press **OK**.

4 Select **[EasyLink Setup]** > **[EasyLink]**, and then press **OK**.

5 Select **[On]**, and then press **OK**.

Control devices

Control the home theater and the other connected HDMI-CEC compliant devices with a single remote control.

One-touch play

If you enable One-touch play, the TV automatically switches to the correct channel when you play a disc in your home theater.

One-touch standby

When you press and hold ⏻ (**Standby**) on the remote control, the home theater and all the connected HDMI-CEC devices (that support one-touch standby) switch to the standby mode.

If one-touch standby is enabled on your home theater, you can switch to standby with the remote control of the TV or other HDMI-CEC devices.

System Audio Control

When you play a device that has its audio output routed to the home theater, the home theater switches to the corresponding audio source automatically.

To use one-touch audio, turn on System Audio Control and follow the instructions on the TV to map connected devices to the audio input connectors of the home theater.

Audio Input Mapping

When you connect a new device to your home theater, map the device to the audio input connector (see 'Play audio from home theater' on page 19).

Play audio from home theater

Play the audio from a connected device through your home theater.

1. Press ⊟ **SETUP**.
2. Select **[General Setup]**, and then press **OK**.
3. Select **[EasyLink Setup]** > **[System Audio Control]** > **[On]**, and then press **OK**.
   - To play the audio from the TV speakers, select **[Off]**, and skip the following steps.
4. Select **[EasyLink Setup]** > **[Audio Input Mapping]**, and then press **OK**.
5. Follow the instructions on the TV to map the audio of the connected device to the audio inputs on your home theater.

5 Change settings

This section helps you to change the settings of your home theater.

Caution

- Most of the settings are already configured with the best value for your home theater. Unless you have a reason to change a setting, it is best to leave it at the default value.

Note

- You cannot change a setting that is grayed out.
- To return to the previous menu, press BACK. To exit the menu, press SETUP.

Picture

Change the picture settings to suit your preferences.

Note

- The best setting is automatically selected for the TV. If you change the setting, make sure that the TV supports the new settings.

Picture settings and format

1. Press SETUP.
2. Select **[Video Setup]**, and then press **OK**.
3. Change the following settings, and then press **OK**:
   - **[TV System]**: For TV supported video format.
   - **[TV Display]**: For TV picture display format.
   - **[Picture Settings]**: Predefined color settings.

Picture resolution

To enjoy high definition HDMI video output, set the HDMI video settings that best match up with your TV capability.

1. Press SETUP.
2. Select **[Video Setup]**, and then press **OK**.
3. Select **[HDMI Setup]**, and then press **OK**.
4. Change the following settings, and then press **OK**:
   - **[Wide Screen Format]**: For 16:9 wide screen TV display setting.
   - **[HDMI Video]**: HDMI resolution.

High definition picture

Support high definition JPEG pictures.

1. Press SETUP.
2. Select **[Video Setup]**, and then press **OK**.
3. Select **[HD JPEG]** > **[On]**, and then press **OK**.

Sound

Change the sound settings to suit your preference.

HDMI audio

HDMI audio is automatically down-mixed to two channel for TV speakers. If you do not want to output audio through your TV, disable the HDMI audio.

1. Press SETUP.
2. Select **[Audio Setup]**, and then press **OK**.
3. Select **[HDMI Audio]** > **[Off]**, and then press **OK**.

Language

Select a language for the home menu, audio, and subtitles.

Home menu

1 Press SETUP.
2 Select **[General Setup]**, and then press **OK**.
3 Select **[OSD Language]**, and then press **OK**.
4 Select a menu language for your home theater, and then press **OK**.

Disc audio

1 Press SETUP.
2 Select **[Preference Setup]**, and then press **OK**.
3 Select **[Audio]**, and then press **OK**.
4 Select an audio language for discs, and then press **OK**.

Note

- If your preferred disc language is not available, select **[Others]** from the list, and enter the 4-digit language code found at the end of this user manual.
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Disc subtitle

1 Press SETUP.
2 Select **[Preference Setup]**, and then press **OK**.
3 Select **[Subtitle]**, and then press **OK**.
4 Select a subtitle language for discs, and then press **OK**.

Disc menu

1 Press SETUP.
2 Select **[Preference Setup]**, and then press **OK**.
3 Select **[Disc Menu]**, and then press **OK**.
4 Select a menu language for discs, and then press **OK**.

Note

- If your preferred disc language is not available, select **[Others]** from the list, and enter the 4-digit language code found at the end of this user manual.
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Parental control

Restrict access to discs.

Password

You can set or change your password to play a restricted disc.

1 Press SETUP.
2 Select **[Preference Setup]**, and then press **OK**.
3 Select **[Password]**, and then press **OK**.
↳ A change password menu is displayed.
4 Follow the instructions on the TV to set or change password.
- If you do not have a password or you have forgotten, enter **0000**.

5 Press **OK**.

Ratings

Some discs are recorded with ratings according to age. You can set up your home theater to play only discs with an age rating lower than your child's age.

1 Press SETUP.
2 Select **[Preference Setup]**, and then press **OK**.
3 Select **[Parental]**, and then press **OK**.
↳ A message prompts you to enter the password.

4 Enter the password with the **Numeric buttons**.

5 Select an age rating, and then press **OK**.
- To play all discs irrespective of the rating, select level **8**.

Lock disc

To restrict access to discs that are not encoded with ratings and parental control, lock the disc manually. You can lock upto 20 discs on your home theater.

1 While playing a disc, press **SETUP**.

2 Select **[General Setup]**, and then press **OK**.

3 Select **[Disc Lock]** > **[Lock]**, and then press **OK**.
↳ A message prompts you to enter the password.

4 Enter the password with the **Numeric buttons**.
↳ The disc is locked.
- To play the locked disc, enter the password.

Energy saving

Save energy by changing the following settings.

Auto standby

When playing a disc or a USB storage device, automatically switch your home theater to standby if:
- it is in pause or stop mode, and
- no button is pressed for 30 minutes.

1 Press **SETUP**.

2 Select **[General Setup]**, and then press **OK**.

3 Select **[Auto Standby]** > **[On]**, and then press **OK**.

Sleep timer

Set timers to switch the home theater to standby after a specified time.

1 Press **SETUP**.

2 Select **[General Setup]**, and then press **OK**.

3 Select **[Sleep Timer]**, and then press **OK**.

4 Select the duration of the sleep timer.
↳ The sleep timer can be set up to 60 minutes. If the sleep timer is set to **[Off]**, it switches off.

5 Press **OK** to activate.
↳ The home theater switches to standby after the specified time.

Screen saver

Automatically switch your home theater to screen saver mode if:
- it is in pause or stop mode, and
- no button is pressed for 10 minutes.

1 Press **SETUP**.

2 Select **[General Setup]**, and then press **OK**.

3 Select **[Screen Saver]** > **[On]**, and then press **OK**.

Display panel

Change the brightness of the home theater display panel.

1 Press **SETUP**.

2 Select **[General Setup]**, and then press **OK**.

3 Select **[Display Dim]**, and then press **OK**.

4 Select the brightness, and then press **OK**.

Apply factory settings

Reset your home theater to the default settings.
You cannot reset the parental control settings.

1 Press SETUP.
2 Select **[Preference Setup]**, and then press **OK**.
3 Select **[Default]**, and then press **OK**.
4 Select **[Ok]**, and then press **OK**.

6 Update software

To continue to get the best features and support for your home theater, update the software regularly. Compare the version of your current software with the latest version on www.philips.com/support.

Check software version

1 Press SETUP.
2 Select **[Preference Setup]**, and then press **OK**.
3 Select **[Version Info.]**, and then press **OK**.
   ↳ The software version is displayed.

Update software through USB or CD-R

What you need

- A CD-R or a USB flash drive with at least 75MB of memory. The USB flash drive must be FAT formatted. Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format (for example, WinZip® for Microsoft® Windows® or StuffIt® for Macintosh®).

Step 1: Download the latest software

1 Connect a USB flash drive or insert a CD-R to your computer.
2 In your web browser, go to www.philips.com/support.
3 At the Philips Support website, find your product and locate the **Software and drivers**.
   ↳ The software update is available as a zip file.
4 Save the zip file in the root directory of your USB flash drive or CD-R.
5 Use the archive utility to extract the software update file in the root directory.
6 Remove the USB flash drive or CD-R from your computer.

Step 2: Update the software

Warning

- If you use a USB flash drive, make sure that there is no disc in the disc compartment, and the disc compartment is closed.

1 Connect the USB flash drive or insert the CD-R to your home theater.
2 Switch your TV to the correct source for your home theater.
3 Follow the instructions on the TV to complete the update.
   ↳ When the software update is complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds, and then reconnect it.

Note

- When the software update is in progress, do not turn off the power, or remove the USB flash drive or CD-R.

7 Product specifications

Note

- Specifications and design are subject to change without notice.

Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD
Europe, United Kingdom	
Asia Pacific, Taiwan, Korea	
Latin America	
Australia, New Zealand	
Russia, India	
China	

Media formats

- DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX media, USB storage device

File formats

- Audio: .mp3, .wma
- Video: .avi, .divx, .mpg, .mpeg,
- Picture: .jpg, .jpeg

Amplifier

- Total output power: 300W RMS (10% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX: 2 V
  - Music iLink: 1 V

Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p

Audio

- S/PDIF Digital audio input:
  - Optical: TOSLINK
- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
  - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 32 kbps - 320 kbps
  - WMA: 64 kbps - 192 kbps

Radio

- Tuning range:
  - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
  - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 200 Hz-12.5 kHz / ±6 dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32
- Maximum memory support: < 160 GB

Main unit

- Power supply:
  - Europe/China/Russia/India: 220-240V~, 50 Hz
  - Latin America/Asia Pacific: 110-240V~, 50-60 Hz
- Power consumption: 70 W
- Standby power consumption: ≤ 0.5 W
- Dimensions (WxHxD): 360 x 58 x 325 mm
- Weight: 2.50 kg

Subwoofer

- Output power: 150 W RMS (10% THD)
- Impedance: 8 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Dimensions (WxHxD): 160 x 265 x 265 mm
- Weight: 2.50 kg

Speakers

- Output power: 2 x 75 W RMS (10% THD)
- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 63.5 mm (2.5") full range
- Dimensions (WxHxD): 84.5 x89 x 89 mm
- Weight: 0.27 kg/each
- Cable length: 3 m

Remote control batteries

- 2 x AAA-R03-1.5 V

Laser

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 - 665 nm (DVD), 770 - 800 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

8 Troubleshooting

Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.
If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www.philips.com/support.

Main unit

The buttons on the home theater do not work.

- Disconnect the home theater from the power supply for a few minutes, then reconnect.

Picture

No picture.

- Make sure that the TV is switched to the correct source for the home theater.
- If this happens when you change the TV system, press ▲ to open the disc compartment, and then **3** on the remote control to restore the default TV system.

No picture on a TV connected through HDMI.

- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- If this happens when you change the HDMI video resolution, switch to its default mode: 1) Press ▲. 2) Press ◀. 3) Press **ZOOM**.
- Wait for 10 seconds for auto recovery, or change the HDMI video setting (see 'Picture resolution' on page 20).

Disc does not play high-definition video.

- Make sure that the disc contains high-definition video.
- Make sure that the TV supports high-definition video.
- Use an HDMI cable to connect to the TV.

Sound

No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices. You do not need a separate audio connection when the home theater and TV are connected through an **HDMI ARC** connection.
- Set up the audio for the connected device (see 'Set up audio for connected devices' on page 12).
- Reset your home theater to its factory settings (see 'Apply factory settings' on page 23), then switch it off and switch on again.
- On your home theater, press **SOURCE** repeatedly to select the correct audio input.

Distorted sound or echo.

- If you play audio from the TV through the home theater, make sure that the TV is muted.

Audio and video are not synchronized.

- 1) Press and hold **AUDIO SYNC**. 2) Press **+/-** within five seconds to synchronize the audio with the video.

Play

Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 25).
- Make sure that the home theater supports the region code of the disc (see 'Region codes' on page 25).

- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

Cannot play a DivX file.
- Make sure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

DivX subtitles do not display correctly.
- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 15).
- Select the correct character set: 1) Press **SETUP**. 2) Select **[Preference Setup]** > **[DivX Subtitle]**. 3) Select the supported character set. 4) Press **OK**.

Cannot read the contents of a USB storage device.
- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater.

'No entry' or 'x' sign appears on the TV.
- The operation is not possible.

EasyLink does not work.
- Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is on (see 'EasyLink' on page 18).

When you switch on the TV, the home theater automatically switches on.
- This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

9 Notice

This section contains the legal and trademark notices.

Copyright

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Copyright in the UK

Recording and playback of material may require consent. See Copyright Act 1956 and The Performers Protection Acts 1958 to 1972.

Compliance

CE

This product is in compliance with the essential requirements and other relevant provisions of Directives 2006/95/EC (Low Voltage), 2004/108/EC (EMC).

Mains fuse (UK only)

This information applies only to products with a UK mains plug.
This product is fitted with an approved molded plug. If you replace the fuse, use one with:

- the ratings shown on the plug,
- a BS 1362 approval, and
- the ASTA approval mark.

Contact your dealer if you are not sure about what type of fuse to use.
Caution: To conform with the EMC directive (2004/108/EC), do not detach the plug from the power cord.

Trademarks

DOLBY DIGITAL

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

DIVX ULTRA

DivX ®, DivX Certified ® and associated logos are registered trademarks of DivX, Inc. and are used under license.
ABOUT DIVX VIDEO: DivX ® is a digital video format created by DivX, Inc. This is an official DivX Certified ® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.
ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified ® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

HDMI, and HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.

CLASS 1
LASER PRODUCT

10 Index

A

amplifier 25
audio
  HDMI audio 20
  predefined modes 13
  quality 12
  settings 20
  specifications 25
audio input mapping 19
audio language 21
audio options 16
auto standby 22

B

brightness 22

C

care
  environment 5
  product 5
connect
  speakers 9
  TV (Composite) 11
  TV (HDMI) 11
connectors
  front connectors 10
control
  disc play 13
  Easylink (HDMI-CEC) 7
  main unit 6
  parental control 21
  radio 17
copyright protection 29
create MP3 18

D

disable
  HDMI-CEC 18
discs
  audio language 21
  audio options 16
  control buttons 13
  DivX 15
  lock/unlock 22
  menu language 21
  options 16
  picture 16
  play 13
  subtitle 21
  synchronize picture and sound 14
  time search 16
  titles 16
display
  MP3/JPEG menu 14
  VCD/SVCD menu 14
display panel 6
DivX
  character set 15
  subtitles 15
  VOD code 15

E

EasyLink (HDMI-CEC)
  audio input mapping 19
  control buttons 7
  one-touch play 18
  one-touch standby 18
  play audio 19
  system audio control 18
enable
  auto standby 22
  HDMI-CEC 18
  screen saver 22
energy
  auto standby 22
  brightness 22
  screen saver 22
  sleep timer 22

F

factory settings 23
FM antenna 10

H

HDMI
audio 20
video settings 20
HDMI-CEC 18

L

language
audio 21
disc menu 21
onscreen menu 21
subtitle 21

M

main unit
overview 6
specifications 26
troubleshooting 27
media formats 25
MP3
connector 10
create MP3 18
display contents 14
play 17

N

night mode 13

O

one-touch play 18
one-touch standby 18
overview
connectors 10
HDMI-CEC 18
main unit 6
remote control 6
settings 20

P

parental control
lock disc 22
password 21
ratings 21
password 21
Philips Easylink 18
picture
high resolution JPEG 20
settings 20
slideshows 16
troubleshooting 27
picture options 16
play
discs 13
MP3 17
radio 25
slideshows 16
troubleshooting 27
USB 14
position
connectors 10
position 9
preference
audio 20
auto standby 22
change password 21
disc menu 21
display panel 22
menu language 21
screen saver 22
sleep timer 22
subtitle 21
product specifications 25

R

radio
control buttons 17
FM antenna 10
listen to radio 17
specifications 25
tune stations 17
ratings 21
recycling 5
region codes 25
remote control
batteries 26
overview 6
repeat 16

S

safety
- disposal 5
- use of the product 4

screen saver 22
settings
- audio 20
- auto standby 22
- default 23
- disc language 21
- HDMI audio 20
- HDMI video 20
- HDMI-CEC 18
- menu language 21
- parental rating 21
- password 21
- picture 20
- power 22
- restore 23
- screen saver 22
- sleep timer 22
- subtitle language 21
- video 20

sleep timer 22
slideshows
- musical 16
- picture 16

software
- check current version 24
- update 24

sound
- predefined sound mode 13
- surround sound 13
- synchronize picture and sound 14
- troubleshooting 27

speakers
- connect 9
- position 9
- specifications 26
- surround sound 13

subtitle
- character set 15
- language 21

subwoofer
- specifications 26

synchronize picture and sound 14
system audio control 18

T

time search 16
titles 16
trademarks 29
troubleshooting
- connection 27
- main unit 27
- picture 27
- play 27
- sound 27

U

update software
- check current version 24
- update 24

USB
- format 26

USB storage device
- options 16
- play 15
- specifications 26

V

video
- picture settings 20
- synchronize picture and sound 14
- VOD code for DivX 15

video formats 25
video options 16
VOD code for DivX 15

Language Code

Abkhazian	6566
Afar	6565
Afrikaans	6570
Amharic	6577
Arabic	6582
Armenian	7289
Assamese	6583
Avestan	6569
Aymara	6589
Azerhaijani	6590
Bahasa Melayu	7783
Bashkir	6665
Belarusian	6669
Bengali	6678
Bihari	6672
Bislama	6673
Bokmål, Norwegian	7866
Bosanski	6683
Brezhoneg	6682
Bulgarian	6671
Burmese	7789
Castellano, Español	6983
Catalán	6765
Chamorro	6772
Chechen	6769
Chewa; Chichewa; Nyanja	7889
中文	9072
Chuang; Zhuang	9065
Church Slavic; Slavonic	6785
Chuvash	6786
Corsican	6779
Česky	6783
Dansk	6865
Deutsch	6869
Dzongkha	6890
English	6978
Esperanto	6979
Estonian	6984
Euskara	6985
Ελληνικά	6976
Faroese	7079
Français	7082
Frysk	7089
Fijian	7074
Gaelic; Scottish Gaelic	7168
Gallegan	7176
Georgian	7565
Gikuyu; Kikuyu	7573
Guarani	7178
Gujarati	7185
Hausa	7265
Herero	7290
Hindi	7273
Hiri Motu	7279
Hrwatski	6779
Ido	7379
Interlingua (International)	7365
Interlingue	7365
Inuktitut	7385
Inupiaq	7375
Irish	7165
Íslenska	7383
Italiano	7384
Ivrit	7269
Japanese	7465
Javanese	7486
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	7589
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish	7585
Lao	7679
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburgan; Limburger	7673
Lingala	7678
Lithuanian	7684
Luxembourgish;	7666
Macedonian	7775
Malagasy	7771
Magyar	7285
Malayalam	7776
Maltese	7784
Manx	7186
Maori	7773
Marathi	7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868
Norwegian Nynorsk;	7878
Occitan; Provencal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian	7065
Polski	8076
Português	8084
Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian	8376
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765
Welsh	6789
Wolof	8779
Xhosa	8872
Yiddish	8973
Yoruba	8979
Zulu	9085

Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

HTD3200_12_UM_V1.0